

\* Spare Parts for **BLH600** Brushless motor handpiece

Dwg. No.	Cat. No.	Part Name	Assembled parts	Dwg. No.	Cat. No.	Part Name	Assembled parts
1	BLH67-116A	TEST BUR (Dia. 2.35 mm)		20	BLH-2-014	CONNECTOR	
	BLH67-116B	TEST BUR (Dia. 3.0 mm)		21	BLH-5-024	SPRING SPACER	
	BLH67-116C	TEST BUR (Dia. 3.175 mm)		22	BLH-6-025	COIL SPRING1	
2	TPH65-117A	COLLET CHUCK (Dia. 2.35 mm)		23	BLH-5-026	SPRING SHEET	
	TPH65-117B	COLLET CHUCK (Dia. 3.0 mm)		24	BLH-5-003	HAND CAP STOPPER	
	TPH65-117C	COLLET CHUCK (Dia. 3.175 mm)		25	BLH-2-001	HAND CAP	HAND CAP
3	BLH-5-001	NOSE CAP	26	BLH-5-005	SET RING		
4	BLH-7-002	NOSE CAP O-RING		27	BLH-6-006	SET KEY	
5	BLH-3-104	CHUCKHOUSING C-RING		28	BLH-7-027	CAM O-RING	
6	BLH-5-105	COLLAR		29	BLH-5-028	CAM	
7	BLH-5-025	B/R STOP COLLAR		30	BLH-8-029	BALL	
8	BLH-3-103	814 WAVE WASHER		31	BLH-5-030	MOVING HOUSING	
9	BLH-3-112	814 WASHER2		32	BLH-6-031	COIL SPRING2	
10	BLH-3-111	814 WASHER1		33	BLH-5-032	B/R COLLAR	
11	BLH-8-017	BALL BEARING(814ZZ)		34	BLH-8-033	BALL BEARING(1360ZZ)	
12	BLH-5-010	CHUCK HOUSING		35	BLH-5-034	B/R STOP BOLT	
13	BLH-5-011	CONNECTION PIN		36	BLH-5-037	MOTOR CASE RING	
14	BLH-5-012	SPACER		37	BLH-6-001	MOTOR	MOTOR ASSEMBLY
15	BLH-5-013	JOINT SHAFT		38	BLH-2-137	MOTOR CASE COVER	
16	BLH-6-020	DISC SPRING		39	BLH-5-138	MOTOR INSERT	
17	BLH-5-022	SPRING STOPPER		40	BLH-1-003	BLH600 MOTOR CORD	
18	BLH-8-023	SPRING PIN		41	BLH-1-001	BLH 600 SPINDLE ASS'Y	
19	BLH-7-307	O-RING		42	BLH-0-001	BLH600 HEAD ASS'Y	

